



HOW TO MANAGE THE TEXT ALERTS THE FROM THE ICRSS PRO APP



1.

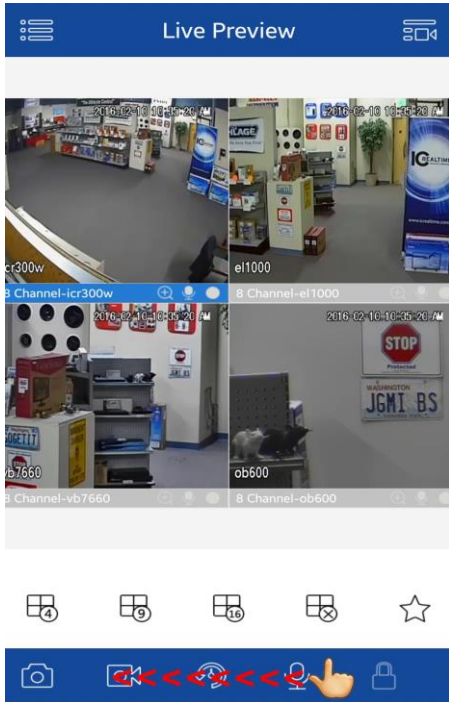


With the app open AND cameras pulled up, slide your finger along the blue tool bar at the bottom of the screen to scroll through the options.

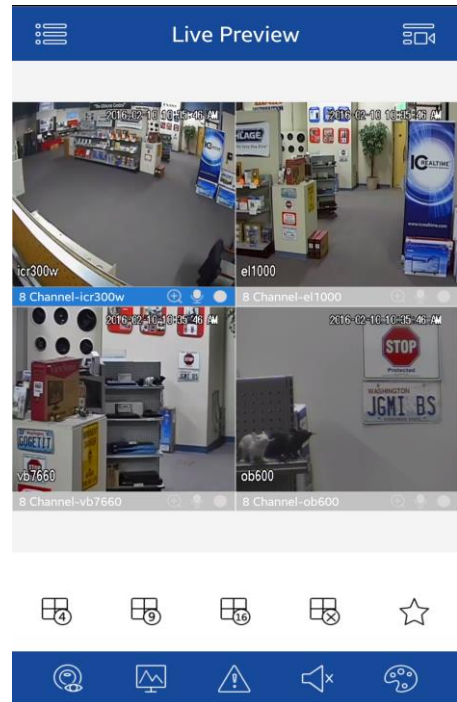

2.




Scroll until you find either a  button or a  button. The only difference between the two is one is on iPhone and one is on Android.

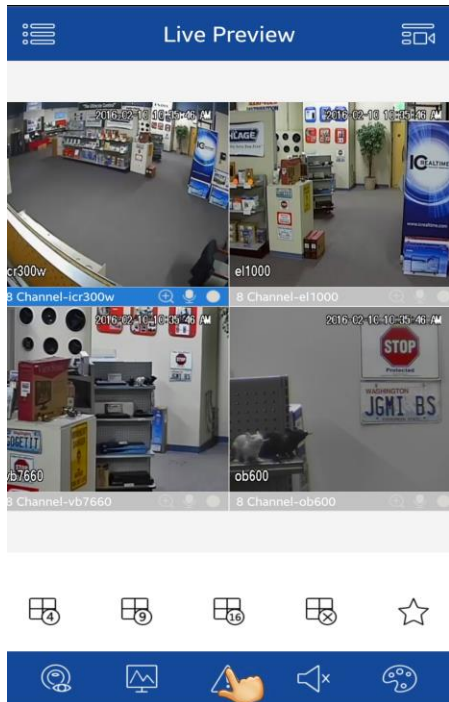3.




Once you have found the  or the  button, tap on it to prompt a menu.

4.

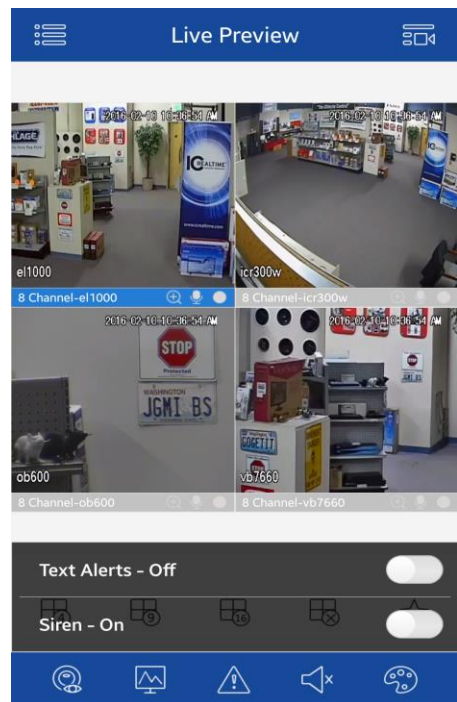


The default menu will be labeled as **Alarm Out 1** and **Alarm Out 2**. The text notifications should be wired into **Alarm Out 1** as illustrated by the “Text Alerts – Off” label in the figure above.


HOW TO MANAGE THE TEXT ALERTS THE FROM THE ICRSS PRO APP

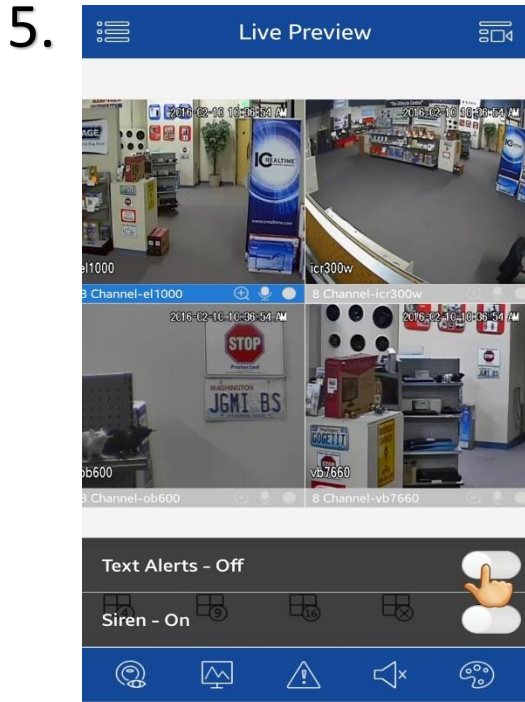


When the text alerts are **ON**, the icon to the right of **ALARM INPUT 1** will be the button on its left side and the background of the slide will be gray. Tap on the icon to turn them **OFF**.

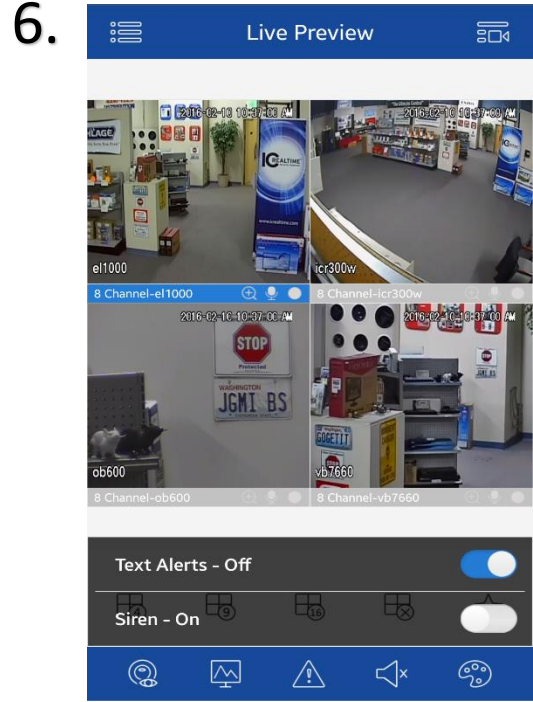

After tapping on the icon, the text alerts should be **OFF** and the button should have moved to the right of the slide and the background should have turned either blue or green depending on the device that you are using.

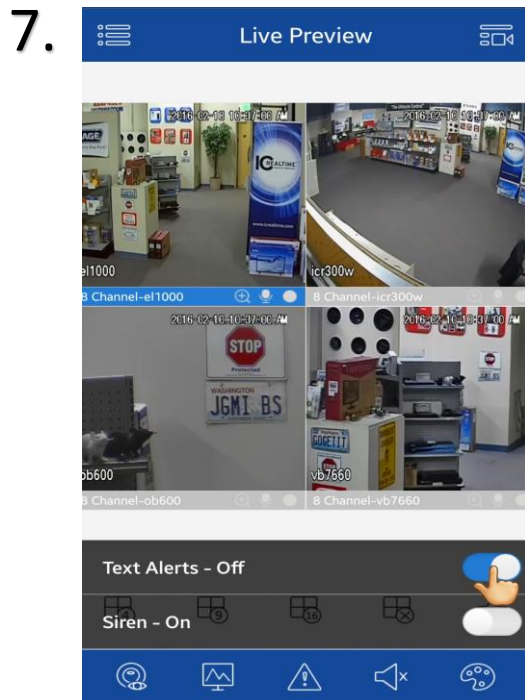

To turn the text alerts back **ON**, simply tap on the same or icon to the right of **ALARM OUT 1** that was used to turn them **OFF**.

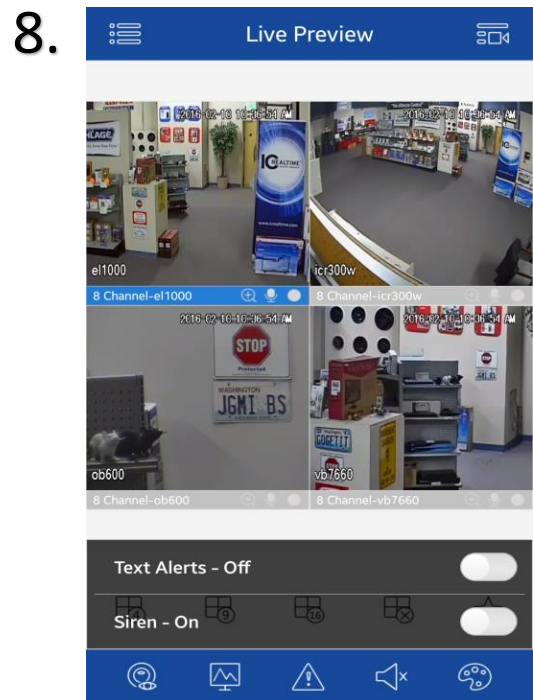

The or to the right of **ALARM OUT 1** will have returned to the original , signifying that the text alerts are back **ON**.